


LAVATHERM 58800

Condensation dryer

User information

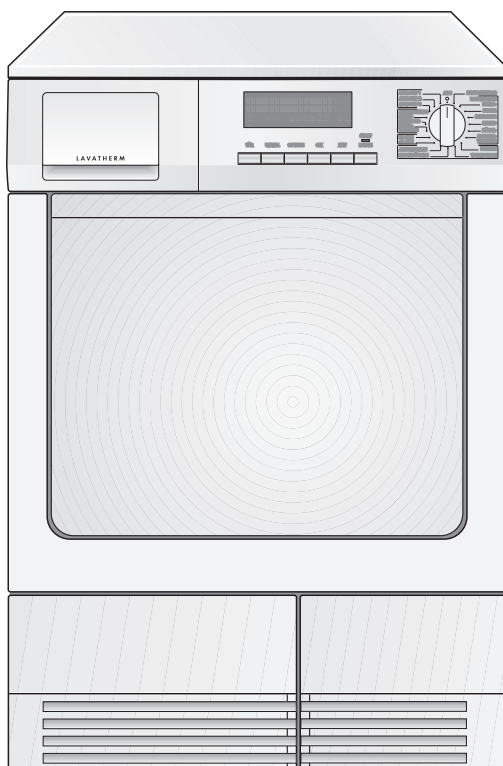

Dear customer,

Please read this User Information carefully and keep it to refer to at a later date.

Pass this User Information on to any subsequent owner of the appliance.

The following symbols are used in the text:



Safety instructions

Warning: Notes that concern your personal safety.

Attention: Notes that show how to avoid damage to the appliance.



Useful tips and hints



Environmental information

Contents

Operating Instructions	5
Safety	5
Disposal	7
Environmental tips	8
Description of machine	9
Control panel	9
What is shown in the display	9
Programme overview	10
Prior to using for the first time	12
Switching on the appliance for the first time - setting the language.....	12
Setting the time.....	13
Before the first drying cycle	13
Sorting and preparing laundry	13
Drying	14
Switching machine on / switching light on	14
Opening loading door / filling laundry	14
Selecting the programme	14
Setting the pre-drainage spin speed	14
Setting options.....	15
Half Power, Buzzer, Sensitive	16
Dry Level	16
Delay Start Timer	17
Long Anticrease	18
Starting the programme	18
Programme progress	18
Changing a programme.....	18
Putting in extra items or taking items out before end of programme	19
Drying cycle complete / removing washing	19
Setup	20
Memory 1, 2, 3.....	20
Sound	21
Water hardness.....	22
Language	22
Clock	23
Contrast and Brightness	23
Condensate tank indicator	24

Cleaning and maintenance	24
Cleaning fluff filter	24
Cleaning the door seal.	26
Emptying the condensed water container	26
Cleaning the heat exchanger	27
Cleaning the drum.....	28
Clean operating screen and housing	28
What to do if.....	28
Remedying small malfunctions	28
Changing bulb for inside light	30
Technical data	31
Consumption values	31
Installation and connection instructions	32
Installation safety instructions	32
Removing transport safety equipment	33
Electrical connection	33
Changing door stop	33
Special accessories	35
Guarantee/Customer Service	36
Service	39

Operating Instructions



Safety

Before first starting up

- Note the **"Installation and connection instructions"**
- Before first starting up, check the machine for any damage incurred during transport. Never connect up a damaged machine. If parts are damaged, contact your supplier.

Intended use

- The dryer is intended for drying standard laundry in domestic applications.
- Conversions or modifications to the dryer are not permitted.
- This dryer is intended only for drying textile material washed in water.
- To minimize the risk of fire in a tumble dryer, the following should be observed:
 - Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer.
 - Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
 - If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard. The „cool down“ cycle of tumble dryers should be used to reduce the temperature of the items. They should not be removed from the tumble dryer or piled or stacked while hot.
 - Items that have been previously cleaned in, washed in, soaked or spotted with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in a tumble dryer.
 - Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol / gasoline, kerosene, spot removers (some brands), turpentine, waxes and wax removers should not be placed in a tumble dryer.

- Items containing foam rubber (also known as latex foam) or similarly textured rubber-like materials should not be dried in a tumble dryer on a heat setting. Foam rubber materials can, when heated, produce fire by spontaneous combustion.
- Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.
- Undergarments that contain metal reinforcements should not be placed in a tumble dryer. Damage to the tumble dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.
- Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in a tumble dryer.
- rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a tumble dryer.
- When using dry-cleaning sets: Only use those products which are declared as suitable for the dryer by the manufacturer.
- Do not place heavily worn laundry items in the dryer. Risk of fire!
- Do not place laundry items with loose fillings (e.g. cushions) in the dryer. Risk of fire!
- Parts with rigid components (e.g. door mats) may cover the air slots. Risk of fire! Do not place such items in the dryer.
- Do not overfill the dryer. Risk of fire! Observe max. loading volume of 6 kg.
- Clean the micro-fine filter and fine strainer after each drying cycle.
- Never operate the dryer without fluff filters or with damaged or blocked fluff filters. Risk of fire!
- Clean the heat exchanger regularly.
- With stacked washer and dryer: Do not place objects on the dryer. These may fall off during operation.
- The covering bonnet of the bulb for the drum light must be screwed down tightly.

Safety of children and infirm persons

- The appliance is not intended for use by young children or infirm persons without supervision.

- Children are often not aware of the dangers involved when handling electrical equipment. Therefore provide the necessary supervision of children when operating the appliance and do not let children play with the dryer – there is a danger that children could become trapped inside the appliance.
- Packaging parts (e.g. films, styropore) can be dangerous for children. Danger of suffocation! Keep packaging parts out of reach of children.
- Make sure that children or small animals do not climb into the drum of the dryer. For this purpose keep the door of the dryer closed when the appliance is not in use.

General safety

- Only specialists may undertake repairs on the dryer.
- Never start up the dryer if the mains cable is damaged or if the operating screen, operating plate or base area are damaged so that the inside of the machine is open and accessible.
- Switch off the dryer before all cleaning, care or maintenance work. Also disconnect the mains plug from the socket or – with permanent connections – switch off the LS switch in the fuse box and/or fully unscrew the screwed-in fuse.
- Disconnect the machine from the power supply during long pauses in operations.
- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- Manifold plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- Do not spray down the dryer with jets of water. Risk of electric shock!
- Do not lean on the open door. The machine may tip over.
- Once the drying cycle has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.

Disposal




Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Warning! Remove mains plug from socket when you have no further use for the machine. Cut off mains cable and dispose of together with plug.

Destroy loading door lock. Children cannot then lock themselves in the machine and put their lives at risk.




Environmental tips


- In the dryer, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.
- Your dryer will function most economically if you:
 - always keep the ventilation slots on the base of the dryer unobstructed;
 - use the loading volumes specified in the programme overview;
 - ensure you have good ventilation in the installation room;
 - clean the micro-fine filter and fine strainer after each drying cycle;
 - spin the laundry well before drying. Example: Consumption data – depending on spinning speed – for 6kg of laundry, dried using the COTTONS STORAGE DRY programme.

Revolutions per minute	Pre-draining		Drying cycle
	Residual dampness in litres	as a %	
800	4.2	70	3,84
1000	3.6	60	3,36
1200	3.2	53	3,10
1400	3.0	50	3,00
1800	2.5	42	2,60

Description of machine

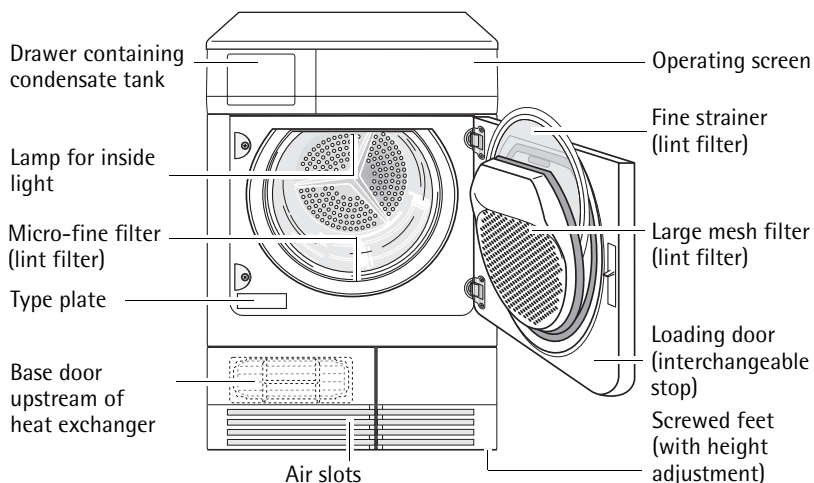

Control panel

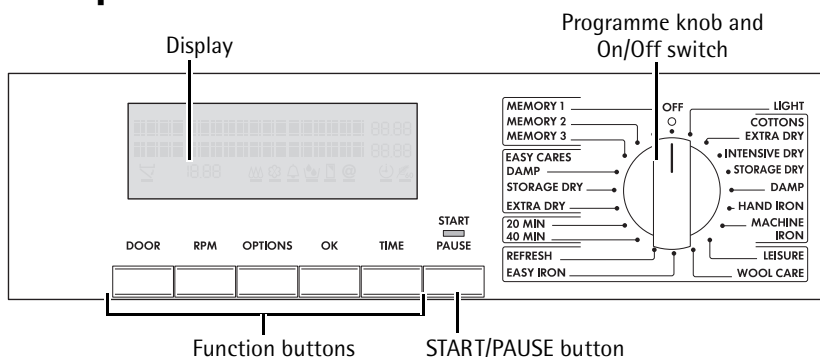

What is shown in the display

Information field, shows the current settings



Programme overview

Programmes		max. load (weight when dry)	Additional functions				Application/properties	Care symbols
			⌘ HALF POWER ¹⁾	🔔 BUZZER	🔥 SENSITIVE ¹⁾	🌀 DRY LEVEL		
COTTONS	EXTRA DRY	6 kg	•	•	•	•	Thorough drying of thick or multi-layered fabrics, e.g. terry towelling items, bathrobes.	☺ ☐
	INTENSIVE DRY	6 kg	•	•	•	•	Thorough drying of thick fabrics, e.g. terry towelling items, towels.	☺ ☐
	STORAGE DRY	6 kg	•	•	•	•	Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitted items, towels.	☺ ☐
	DAMP	6 kg	•	•	•	•	For thin fabrics which are also to be ironed, e.g. knitted items, cotton shirts.	☺ ☐
	HAND IRON	6 kg	•	•	•	•	For normal thickness cotton or linen laundry, e.g. bedding, table linen.	☺ ☐
	MACHINE IRON	6 kg	•	•	•	•	For cotton or linen laundry which is also to be machine pressed, e.g. bedding, table linen.	☺ ☐
EASY CARES	EXTRA DRY	3 kg	•	•	•	•	Thorough drying of thick or multi-layered fabrics, e.g. pullovers, bedding, table linen.	☺ ☺ ²⁾ ☐
	STORAGE DRY	3 kg	•	•	•	•	For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.	☺ ☺ ²⁾ ☐
	DAMP	3 kg	•	•	•	•	For thin fabrics which are also to be ironed, e.g. knitted items, cotton shirts.	☺ ☺ ²⁾ ☐

1) ⌘ HALF POWER and 🔥 SENSITIVE cannot be selected together.

2) Select ⌘ HALF POWER.

Programmes	max. load (weight when dry)	Additional functions				Application/properties	Care symbols
		⚡ HALF POWER ¹⁾	🔊 BUZZER	🔥 SENSITIVE ¹⁾	🌀 DRY LEVEL		
LEISURE	6 kg	•	•	•	•	Special programme for leisure clothing, such as jeans, sweat-shirts, etc., of different material thicknesses (e.g. at the neck, cuffs and seams).	☺ ☺
WOOL CARE	1 kg	•	•	-	-	Special programme for briefly treating woollens with warm air, after they have been dried naturally, worn or stored for long periods. Wool fibres stand up and the wool becomes soft and cosy. Recommendation: Remove fabrics immediately after drying.	
EASY IRON	1 kg	•	•	-	-	Special programme with anti-crease mechanism for easy care fabrics such shirts and blouses; for minimum ironing effort. The result depends on the type of fabric and its finish. (The load corresponds to approx. 5 to 7 shirts.) Recommendation: Place fabrics in the dryer straight after spinning. Once dried, immediately remove fabrics and place on a clothes hanger.	☺ ☺ ²⁾ ☺
REFRESH	1 kg	•	•	-	-	Special programme, lasting around 35 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning products. (Only use those products which are declared as suitable for the dryer by the manufacturer; please observe the manufacturer's instructions for use.)	
40 MIN 20 MIN	1 kg	•	•	-	-	For drying individual items of laundry or for small volumes of less than 1 kg.	☺ ☺ ²⁾ ☺

1) ⚡ HALF POWER and 🔥 SENSITIVE cannot be selected together.

2) Select ⚡ HALF POWER.

Prior to using for the first time

Switching on the appliance for the first time - setting the language

The display is set to English as standard in the factory.



Important! If the display does not show the menu for setting the language when the appliance is switched on, the appliance has been switched on before. If this happens, please see the section "Setup/Language".

To switch on the appliance, turn the programme knob to any programme, e. g. COTTONS EXTRA DRY.

The display lights up and should look like the illustration opposite.

In addition the display shows:

- "To change push OPTION key"
- "To confirm push OK key"

If you want to keep the language:

Press the OK button.

If you want to change the language:



1. Press the OPTIONS button repeatedly, until the desired language appears in the display, e. g. DEUTSCH.
2. Press the OK button.

In the display DEUTSCH flashes several times and the display should then look like e. g. the illustration opposite.

3. To switch the appliance off, turn the programme knob to OFF.



If the wrong language is set by mistake, please look at the "Setup/Language" section.

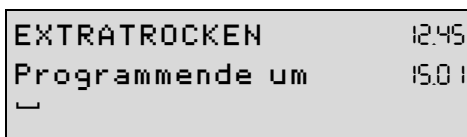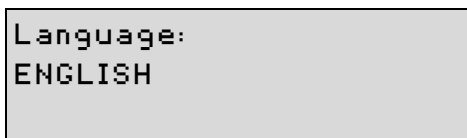

Setting the time

So that the time and the end of the programme are correctly displayed, please check the time shown in the display and set the current time if necessary. To do this, please see the section "Setup/Clock".






Before the first drying cycle

In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (20 MIN) with damp cloths in the machine.

Sorting and preparing laundry

Sorting laundry

- Sort by fabric type:
 - Cotton/linen for programmes in COTTONS programme group.
 - Mixtures and synthetics for programmes in EASY CARES programme group.
- Sorting by care label. The care labels mean:

			
Basic drying in tumble dryer possible	Drying at normal temperature	Drying at reduced temperature (select  HALF POWER!)	Drying in tumble dryer not possible

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry tricot or knitted items with the EXTRA DRY programme. Items may become stuck!
- Do not dry wool in the dryer. May become entangled! After air-drying, wool may be dried with the WOOL CARE programme.

Preparing laundry


- To avoid laundry becoming tangled: Close zips, button up coverings and tie loose bands or ribbons (e.g. of aprons).
- Empty pockets. Remove metallic items (paperclips, safety pins etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Drying

Switching machine on / switching light on

Turn the programme selector to any programme or turn it to LIGHT. The machine has been switched on. When the loading door is opened, the drum is illuminated.

Opening loading door / filling laundry

1. Open loading door:
 - Either use force to push against the loading door (push point )
 - or if the machine is switched on: Press the DOOR button.
2. Load your laundry (do not force it in).




Caution! Do not jam laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.

Selecting the programme

Use the programme selector to set the programme you require.

The estimated time of the end of the programme appears in the multi-display.

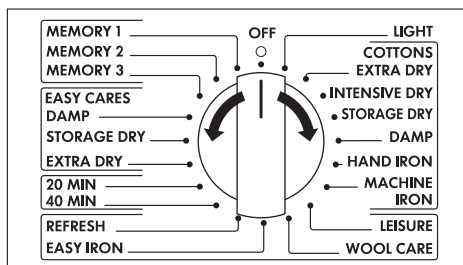

Setting the pre-drainage spin speed

If the washing in the washing machine was initially drained prior to the drying cycle, the dryer can be set according to the spin speed of the initial drainage procedure. The higher the spin speed was, the shorter the programme length for the drying cycle.



1. Press the RPM button a number of times until the desired spin speed of the initial drainage is displayed.


Setting options


Options can be added to a drying cycle that has already been selected. Press the **OPTIONS** button. The display shows the symbols for the options.

Dry Level

Fine adjustment of the washing's degree of dryness in three stages: Laundry becomes drier from  to .

Half Power

For especially gentle drying of sensitive fabrics with the  care label and for temperature-sensitive textiles (e.g. acrylic, viscose). Programme is executed with reduced heat.

 **HALF POWER** is only suitable for use with loads of up to 3 kg.

Buzzer

When the drying cycle has finished, an intermittent acoustic audible signal will sound.

Sensitive

For gentle drying of fabrics that are frequently worn. Programme starts on full heat setting, which is then reduced as the programme progresses to be kind to the washing.


Setup

The special functions which can be set under Setup remain permanently stored in the appliance, e.g. time, language etc (see "Setup" section), until they are changed or switched off.



Only the options that can be combined with the cycle that has already been set are shown in the display.

Half Power, Buzzer, Sensitive

1. Press the OPTIONS button repeatedly until the required symbol flashes, e. g.  HALF POWER (every time you press a button, the next symbol will flash – going from left to right).



2. Press the OK button. The symbol stops flashing. A black bar appears under the symbol. The option is set. The display changes to the next option.




To switch off the option, press the OPTIONS button repeatedly until the symbol for the option flashes and then press the OK button. The black bar under the symbol disappears.





If other options are to be selected: Press the OPTIONS button repeatedly until the desired symbol flashes and confirm each one with the OK button.

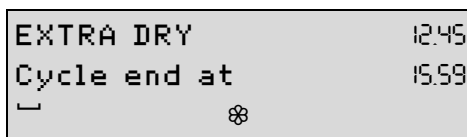

3. Press the OPTIONS button repeatedly, until the initial display appears. The display shows the symbol for the selected option.



Dry Level

1. Press the OPTIONS button repeatedly until the  DRY LEVEL symbol flashes.
2. Press the OK button.
3. Press the OPTIONS button. The symbol  INCREASED DRY appears with a black bar.



4. To change from  INCREASED DRY to  VERY DRY, press the OPTIONS button again.


i Using the OPTIONS button you can change between Δ INCREASED DRY, $\Delta\Delta$ VERY DRY and $\Delta\Delta\Delta$ EXTRA DRY.

5. Press the OK button to confirm the selection. The display changes to the \otimes HALF POWER symbol, this means the HALF POWER option can now be set.

Delay Start Timer

1. Press the TIME button repeatedly until the \odot DELAY START symbol flashes.
2. Press the OK button. In the display, "Start in 0 min" is displayed.


3. Press the TIME button repeatedly until the display shows the desired start delay, e. g. "Start in 4 hours". A black bar appears under the \odot symbol.

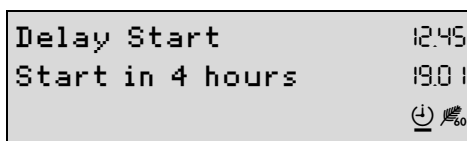

i If 20 h is displayed and you press the button again, the delay start timer is cancelled.

4. Press the OK button. The display changes to the $\text{☼}\%$ LONG ANTICREASE symbol - this means that by pressing the OK button a 60-minute anti-crease phase can be set.

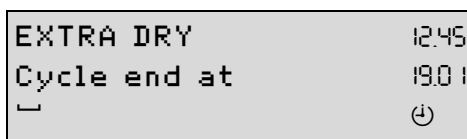

5. Press the TIME button, if the 60-minute anti-crease phase is not to be set. The display shows the \odot DELAY START symbol as well as the time remaining until the end of the programme (including the period by which the start has been delayed).



6. To activate the Delay Start Timer, press the START/PAUSE button. The display now shows, for example, "Start in 4.00" (=4 hours). The display for the time remaining until the start of the programme is reduced in 30 minute intervals (e.g. 4.00, 3.30, 3.00 and so on).

i Until the start of the programme the drum is moved at longish intervals to loosen the laundry.

Long Anticrease


1. Press the TIME button repeatedly until the  LONG ANTICREASE symbol flashes.
2. Press the OK button. A 60 minute anti-crease phase is set. The display changes to the initial display. It now shows the  LONG ANTICREASE symbol.



Starting the programme


1. Press the START/PAUSE button.


The programme is started or it starts after the time delay set has elapsed.

-  If after pressing the START/PAUSE button the display shows "PLEASE CLOSE THE DOOR", the door has not been shut properly. Push the door closed firmly and press the START/PAUSE button again.

Programme progress


The display indicates the stage of the programme that is currently being performed as well as the time of the end of the programme.

-  During the drying cycle the time of the end of the programme may change as the programme adjusts itself to different conditions (e.g. type and volume of laundry).

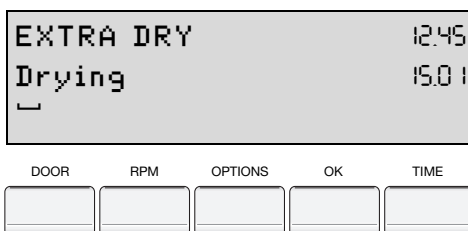

Changing a programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme knob to OFF and then reset the programme.

-  The programme can no longer be changed directly once the programme has started. If you nevertheless attempt to change the programme with the OPTIONS button or the programme knob, the message SELECTION ERROR will flash in the display. The drying programme is not however affected by this (washing protection).

Putting in extra items or taking items out before end of programme

1. Open door.



Warning! Laundry and drum can become hot. Risk of burns!

2. Load or remove laundry items.
3. Close door securely.
4. Press the START/PAUSE button to continue the drying cycle.

Drying cycle complete / removing washing

If the audible signal is set, at the end of the programme a 4x signal sounds and the display alternates between the messages "ANTICREASE", "PLEASE EMPTY THE TANK" and "PLEASE CLEAN THE FILTERS".



The drying cycle is automatically followed by a anti-crease phase which lasts around 30 minutes. The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. The laundry can be removed at any time during the anti-crease phase. (The laundry should be taken out towards the end of the anti-crease phase at the latest to prevent creases from forming.)

1. Open door.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose (see "Cleaning and maintenance" section).
3. Remove laundry.
4. Turn the programme knob to OFF.

Important! After each drying cycle

- clean the micro-fine filter and fine filter,
- drain the condensed water container (see section "Cleaning and maintenance").

5. Close door.


Setup




The special functions that can be set under Setup remain permanently stored independent of each drying cycle – even after the appliance has been switched off or the mains plug has been removed from the socket.

 

Memory 1, 2, 3

Programme combinations can be stored at programme knob positions MEMORY 1, 2, 3 and can then be selected using the programme knob. To do this, the desired programme combination is first put together and then stored.

Setting the Memory

Example: Programme position MEMORY 1 is to be given the following programme combination: COTTONS EXTRA DRY with  SENSITIVE option.

1. Turn the programme knob to COTTONS EXTRA DRY.
2. Using the OPTIONS button, set to  SENSITIVE and press the OK button. A black bar appears under the  symbol.
3. Press the OPTIONS button repeatedly until the  SETUP symbol flashes.
4. Press the OK button. The display changes to the Special Functions level. Programme memory position MEMORY 1 is offered first.

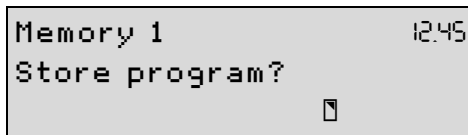


To change to another memory position, press the OPTIONS button.

5. Press the OK button.
The programme combination is now stored to programme knob position MEMORY 1 and in the future can be selected directly using the programme knob.




The memory can be overwritten at any time with a new programme combination (see "Changing the Memory"), but cannot be deleted.


Changing the Memory

1. Put together the new programme combination as required (for an example, see "Setting the Memory", steps 1 and 2).
2. Press the **OPTIONS** button repeatedly until the  **SETUP** symbol flashes.
3. Press the **OK** button.
4. Using the **OPTIONS** button, select the memory position to be changed, e. g. **MEMORY 1**.
5. Store the new programme combination using the **OK** button.

Sound


The volume of the acoustic audible signal can be selected.

1. Turn the programme knob to any programme and press the **OPTIONS** button repeatedly, until the  **SETUP** symbol flashes.
2. Press the **OK** button.
3. Press the **OPTIONS** button repeatedly, until **SOUND** is shown in the display.
4. Press the **OK** button.
5. Press the **OPTIONS** button repeatedly until the desired volume (**NORMAL**, **LOW**, **NO SOUND**) is shown in the display.
6. Press the **OK** button to confirm the setting. The icon changes to the next special function.
7. Press the **OPTIONS** button repeatedly until the initial display is shown.

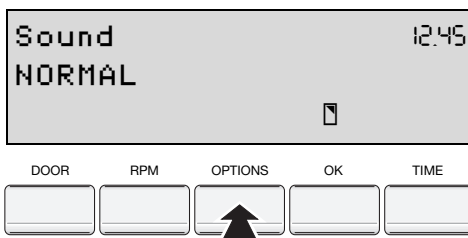


Water hardness


The dryer's degree of dryness detection can be set to the hardness of the washing water.

1. Turn the programme knob to any programme and press the OPTIONS button repeatedly, until the  SETUP symbol flashes.
2. Press the OK button.
3. Press the OPTIONS button repeatedly, until WATER HARDNESS is shown in the display.
4. Press the OK button.
5. Press the OPTIONS button repeatedly until the desired water hardness (NORMAL, SOFT, HARD) is shown in the display.
6. Press the OK button to confirm the setting. The icon changes to the next special function.
7. Press the OPTIONS button repeatedly until the exit icon is displayed.




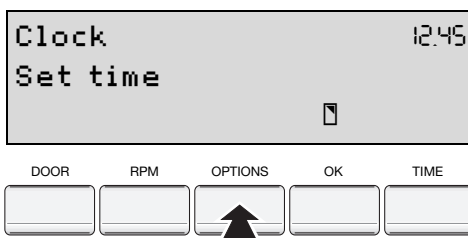
Language

1. Turn the programme knob to any programme and press the OPTIONS button repeatedly, until the  SETUP symbol flashes.
2. Press the OK button.
3. Press the OPTIONS button repeatedly, until LANGUAGE is shown in the display.
4. Press the OK button.
5. Press the OPTIONS button repeatedly, until the desired language appears in the display.
6. Press the OK button. The icon changes to the next special function.
7. Press the OPTIONS button repeatedly, until the initial display appears.

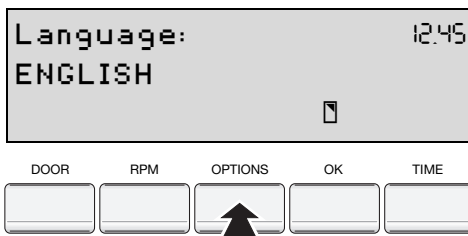


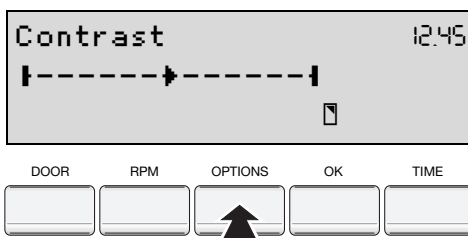
Clock

1. Turn the programme knob to any programme and press the OPTIONS button repeatedly, until the  SETUP symbol flashes.
2. Press the OK button.
3. Press the OPTIONS button repeatedly, until CLOCK is shown in the display.
4. Press the OK button.
5. Using the OPTIONS button, set the desired time. With each press of the button, the display moves on by one minute. If the button is kept pressed, the display changes in 10 minute steps.
6. Press the OK button. The icon changes to the next special function.
7. Press the OPTIONS button repeatedly, until the initial display appears.




Contrast and Brightness


1. Turn the programme knob to any programme and press the OPTIONS button repeatedly, until the  SETUP symbol flashes.
2. Press the OK button.
3. Press the OPTIONS button repeatedly until the display shows CONTRAST or BRIGHTNESS.
4. Press the OK button.
5. Using the OPTIONS button, set the desired setting. With each press of the button or if the button is kept pressed down, the black triangle in the diagram moves further to the right for more contrast or more brightness. If the triangle reaches the right hand edge, it starts again from the left.
6. Press the OK button. The icon changes to the next special function.
7. Press the OPTIONS button repeatedly, until the initial display appears.



Condensate tank indicator

The tank indicator at the end of the programme can be deactivated, for example, if an external condensed water drain is installed.

1. Turn the programme knob to any programme and press the OPTIONS button repeatedly, until the  SETUP symbol flashes.
2. Press the OK button.
3. Press the OPTIONS button repeatedly, until TANK WARNING is shown in the display.
4. Press the OK button.
5. Press the OPTIONS button to set to the desired setting (ENABLED, DISABLED).
6. Press the OK button to confirm the setting. The display changes to the initial display.

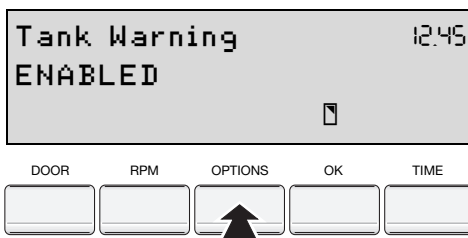

Cleaning and maintenance


Cleaning fluff filter

To ensure that the dryer works perfectly, the fluff filters (micro-fine filter and fine strainer) must be cleaned after every drying cycle.




Caution! Never operate the dryer without fluff filters or with damaged or blocked fluff filters.


1. Open loading door
2. Use a damp hand to clean the micro-fine filter, which is built into the lower part of the loading aperture.

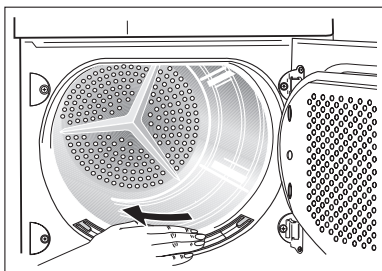

3. Push down unlock button on large mesh filter.
Large mesh filter jumps up.

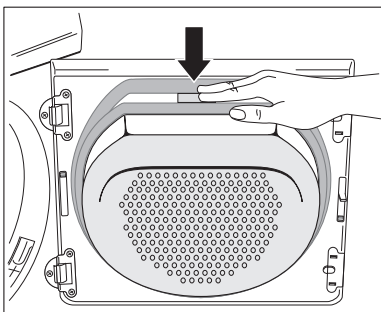

4. Take out fine strainer.
5. Remove fluff from fine strainer. It is best to use a damp hand for this purpose.

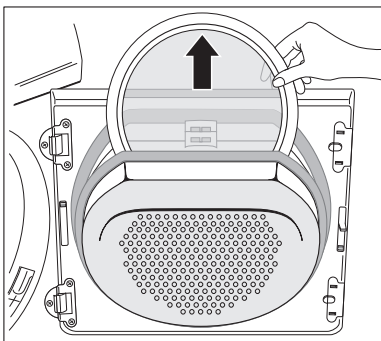


Clean the entire filter area




The strainer area does not have to be cleaned after every drying cycle, but should be checked regularly and cleaned of fluff if necessary.

6. To do this, grip the top of the large mesh filter and pull it forwards until it comes loose from the two brackets.
7. Remove fluff from the entire filter area. It is best to use a vacuum cleaner for this purpose.
8. Press both journals of the large mesh filter into the brackets on the loading door until they snap into place.
9. Re-insert fine strainer.
10. Press against the large mesh filter until it locks into the interlock.

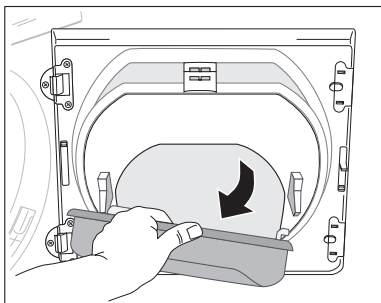

If the fine strainer is not fitted, the large mesh filter will not snap into place and the loading door cannot be closed.

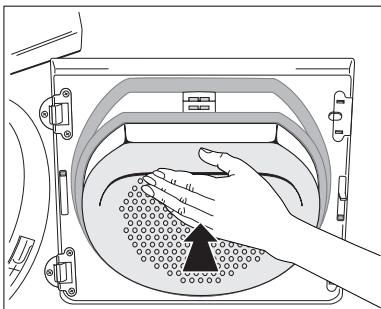

Cleaning the door seal

Wipe the door seal with a damp cloth immediately after the drying cycle has finished.

Emptying the condensed water container


Empty condensed water container after every drying cycle.

When a programme is running and the condensed water container becomes full, the programme is automatically interrupted and the message THE TANK IS FULL, PLEASE EMPTY appears in the display. In order to continue the programme, the condensed water container must first be emptied.




Warning! The condensate is not suitable for drinking or for preparing foodstuffs.

1. Take out drawer containing condensed water container completely (1) and pull up the condensed water container's drainage pipe as far as it will go (2).

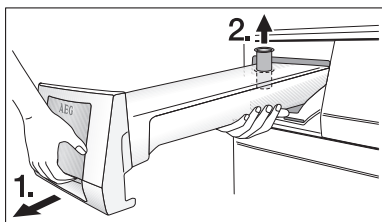

2. Pour condensed water out into a basin or similar receptacle.
3. Push drainage pipe in and refit condensed water container.

If the programme has been interrupted as a result of the condensed water container being full: Press the START/PAUSE button to continue the drying cycle.

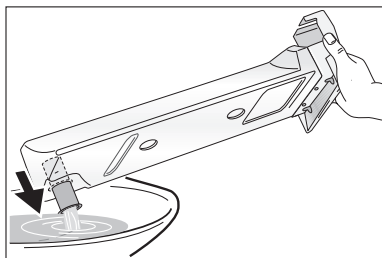

The condensed water container has a volume of approx. 4 litres. This is sufficient for around 6kg of laundry which has previously been spun at 800 revolutions/minute.



The condensed water be used as distilled water, e.g. for steam irons. However first filter the condensed water (e.g. with a coffee filter) to remove any residues and small pieces of fluff.



Cleaning the heat exchanger

If the display shows PLEASE CLEAN THE CONDENSER, the heat exchanger must be cleaned.




Caution! Operating when the heat exchanger is blocked with fluff can damage the dryer. This also increases energy consumption.

1. Open door.
2. Open door in plinth. To do this, press the release button on the bottom of the door aperture and open the door in the plinth to the left.
3. Clean fluff from the inside of the door and the heat exchanger front chamber. Wipe the door seal with a damp cloth.
4. Turn both lock washers inwards.

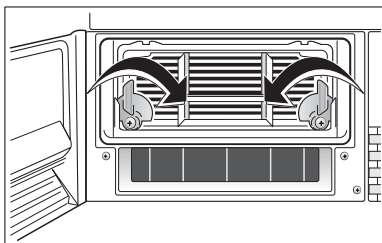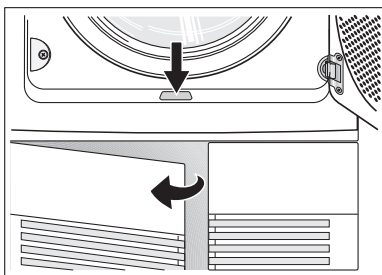

5. Use the handle to pull the heat exchanger out of the base and carry it horizontally to prevent any remaining water from spilling.
6. To empty the heat exchanger, hold vertically over a washing-up bowl.

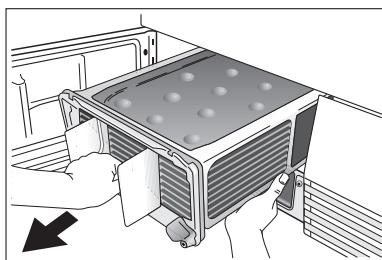

Caution! Do not use sharp objects to clean. The heat exchanger could develop leaks.

7. Clean heat exchanger.
It is best to use a brush or to rinse thoroughly with a hand-held shower.
8. Replace heat exchanger and lock into place (turn both lock washers outwards until they snap into place).
9. Close door in plinth.



Caution! Never operate the dryer without the heat exchanger.

Cleaning the drum



Caution! Do not use abrasives or steel wool to clean the drum.



Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the dryer.

Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

Clean operating screen and housing



Caution! Do not use furniture cleaners or aggressive cleaning agents to clean the machine.

Use a damp cloth to wipe down the operating screen and housing.

What to do if...

Remedying small malfunctions

If while the appliance is operating a short acoustic audible signal sounds 3 times (if the acoustic audible signal is set) and one of the following messages appears in the display:

– PLEASE CHECK THE LOAD,

– PLEASE CLOSE THE DOOR,



please have a look at the following table.

When the fault has been remedied, press the START/PAUSE button.

If "WarningError code: **E** and number or letter" is displayed: Switch the appliance off and on again. Reset programme. Press the START/PAUSE button.

If the error appears again, please contact the Customer Care Department, stating the error code.

Problem	Possible cause	Remedy
Dryer is not working.	Mains plug is not plugged in or fuse is not working correctly.	Plug in at mains socket. Check fuse in fuse box (domestic installation).
	Door is open.	Close door.
	START/PAUSE button pressed?	Press the START/PAUSE button again.

Problem	Possible cause	Remedy
Drying results unsatisfactory.	Wrong programme selected.	Select a different programme the next time you dry (see section "Overview of programmes").
	Fluff filter blocked.	Clean fluff filter.
	Heat exchanger blocked with fluff.	Clean heat exchanger.
	Incorrect amount of washing.	Observe recommended loads.
	Ventilation slots in base area covered up.	Uncover ventilation slots in base area.
	Residue on inside surface of drum or drum paddles.	Clean inside surface of drum and drum paddles.
		Adjust using the  DRY LEVEL option (see section "Drying, Setting options").
Display shows: PLEASE CLOSE THE DOOR.	Door not closed properly.	Close door - there should be an audible click. Restart the programme.
Door cannot be opened with the DOOR button.	Mains plug disconnected.	Plug in at mains socket.
	Programme knob in OFF position.	Set programme. Door can be opened at any time by exerting pressure on the door.
Door cannot be closed.	Fine filter not in place and/or large mesh filter not inserted correctly.	Install fine filter and/or snap large mesh filter into place.
Display shows: SELECTION ERROR.	The selected function cannot be combined with other programme settings.	Select another function.
Drum light is not working.	Programme knob in OFF position.	Turn programme knob to  LIGHT or to any programme.
	Defective light bulb.	Replace light bulb (see next section).
Programme stops midway, display shows: THE TANK IS FULL, PLEASE EMPTY.	Condensate tank is full.	Empty condensate tank, then start programme with the START/PAUSE button.

Problem	Possible cause	Remedy
Drying cycle ends shortly after programme starts. Display shows: PLEASE CHECK THE LOAD.	Not enough washing loaded or washing loaded is too dry for selected programme.	Select Timed Drying or higher degree of dryness (e.g. INTENSIVE DRY instead of STORAGE DRY).
Washing is heavily creased.	Possibly too much washing was loaded.	Observe recommended loads.

Changing bulb for inside light

Only use a special bulb which is designed specially for dryers. The special bulb is available from the after-sales service, ET-Nr. 112 552 000-5.



Warning! Do not use standard bulbs! These develop too much heat and may damage the machine!



Warning! Before replacing the bulb, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Unscrew covering bonnet from above bulb (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section.)
2. Replace defective bulb.
3. Screw covering bonnet back down.



Warning! For reasons associated with safety, the covering bonnet must be screwed down tightly. If this is not done, the dryer must not be operated.

Technical data



This appliance conforms with the following EU Directives:

- 73/23/EEC dated 19.02.1973 Low Voltage Directive
- 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
- 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x width x depth	85 x 60 x 60 cm
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm
Weight when empty	approx. 42 kg
Loading volume (depends on programme) ¹⁾	max. 6kg
Energy consumption in accordance with IEC 1121 s. e. (6kg of cotton, pre-drained at 1000 rpm, COTTONS STORAGE DRY programme)	3,36kWh
Use	Domestic
permissible ambient temperature	+ 5°C to + 35°C

1) Different loading volume data may be needed in some countries as a result of different measuring methods.

Consumption values

The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

Programme	Loading volume in kg	Energy consumption in kWh
COTTONS STORAGE DRY ¹⁾	6	3,36
COTTONS HAND IRON ¹⁾	6	2,70
EASY CARES STORAGE DRY ²⁾	3	1,20

1) pre-drained at 1000 rpm

2) pre-drained at 1200 rpm

Installation and connection instructions



Installation safety instructions


- Before first starting up, all parts of the transport safety equipment must be removed. The machine may otherwise be damaged.
- Before starting up for the first time, ensure that the nominal voltage and type of current specified on the machine type plate match the nominal voltage and type of current at the installation site. The electrical fuses required can also be found on the type plate.
- Always connect the plug into a protection contact socket which has been installed as specified.
- With permanent connections: A permanent connection may only be established by an authorised specialist electrician.
- Caution: if the appliance is supplied from a cord extension set or electric portable outlet device the cord extension set or electric portable outlet device should be positioned so it is not subject to splashing or ingress of moisture.
- Do not install machine in rooms at risk of frost.
- Ensure that the door of the machine cannot be blocked by interior doors of the house or the doors of other appliances.
- Do not install on carpets with high piles. Air circulation will be hindered at the ventilation slots.
- Ensure that the machine is not placed on its mains cable.
- Install the machine horizontally.

Removing transport safety equipment




Caution! Before first starting up, all parts of the transport safety equipment must be removed.

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.

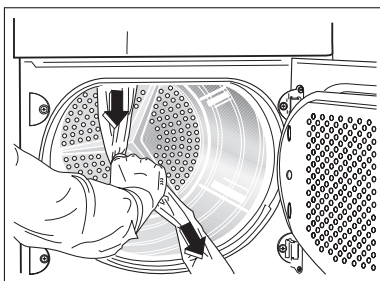

3. Remove foil hose and polystyrene padding from the machine.

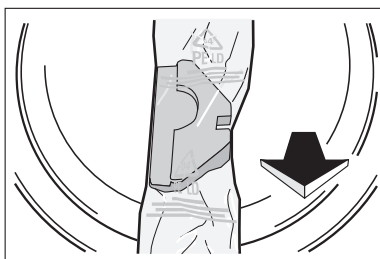

Electrical connection

Details on mains voltage, type of current and the fuses required should be taken from the type plate. The type plate is fitted near the loading aperture (see "Machine description" section).

Important:

The plug must be accessible after the appliance has been installed.


Changing door stop




Warning! The door stop may only be changed by a specialist. If necessary, please contact our after-sales service or your specialist dealer.

Warning! Before changing the door stop, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Open loading door.
2. Unscrew hinge A from the front of the machine and take off the loading door.
3. Remove cover plates B and C. To do this, insert a thin screwdriver into the slots as shown in the illustration, press downwards slightly and pry out the cover plates.
4. Use an appropriate tool and exert pressure to unfasten locking block D from the snap-on fixture, take out and reinsert on the other side having rotated the block through 180°.
5. Unscrew hinge A from the loading door, rotate through 180°, reinsert on the opposite side and screw down.

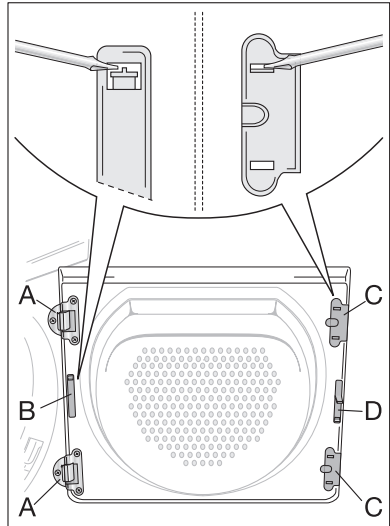

6. Reinsert cover plates B and C on the opposite site having first rotated them through 180°.
7. Unscrew cover plates E from the front of the machine, rotate through 180°, screw on the opposite side.
8. Unscrew door lock F, push down slightly and remove from the front of the machine.
9. Disconnect cable connector from door lock F.
10. Press snap-in button G in and down, press cover down slightly and remove from front of the machine.
11. Disconnect cable connector from cover G.
12. Change door lock F over to the opposite side, insert the cable connector and screw down the door interlock.

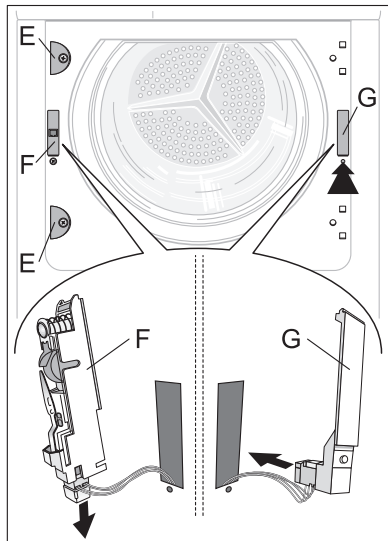

13. On the other side, insert the cable connector in cover G, insert cover and allow snap-in button to lock into place.

14. Insert loading door and hinges into recesses on the front of the machine and screw down.
15. Once the door stop has been replaced, check the function of the DOOR button.

Note regarding contact protection: The machine is only secure for operations again once all plastic parts have been inserted.

Special accessories

The following special accessories are available from your Service Force Centre or your specialist dealer:

Intermediate installation kits for stacked washer and dryer

These intermediate installation kits can be used to arrange the dryer and an AEG-Electrolux washing machine (60cm wide, front loading) as a space-saving washer/dryer stack. The automatic washing machine is at the bottom and the dryer is at the top.

Two versions can be supplied:

- without stacker plate 916 019 102
- with extractable stacker plate 916 019 103

Installation kit for external condensed water drain

Installation kit (125 122 510) for direct draining of condensed water into a basin, spigot, drain, etc. The condensate tank then no longer has to be emptied; it must however remain in its position in the appliance. To switch off the TANK indicator, see the section "Setup, Condensate tank indicator"

Max. pumping height: 1 m from the surface on which the dryer is standing; max. pumping length: 3 m

Guarantee/Customer Service

Weitere Kundendienststellen im Ausland

In diesen Ländern gelten die Garantiebedingungen der örtlichen Partner. Diese können dort eingesehen werden.

Further after-sales service agencies overseas

In these countries our AEG-Electrolux agents' own guarantee conditions are applicable. Please obtain further details direct.

Autres agences étrangères assurant le service après-vente

Dans ces pays, les conditions de garantie des concessionnaires de la région sont valables. Vous pouvez les consulter sur place.

Otros puntos de Postventa en el extranjero

En estos países rigen las condiciones de nuestros representantes locales, las cuales pueden ser consultadas allí mismo.

Ulteriori uffici del servizio tecnico assistenza clienti all'estero

In questi paesi sono valide le condizioni di garanzia dei partner locali. Queste condizioni possono essere esaminate sul luogo.

Serviços de assistência técnica no estrangeiro

Nestes países são válidas as condições de garantia dos concessionários locais, podendo aí ser consultadas.

További vevőszolgálati irodák külföldön

Ezekben az országokban a mi AEG-Electrolux vevőszolgálatainknál saját jótállási feltételek alkalmazhatók. A további adatokat kérjük közvetlenül szerezzék be.

Servisne službe

Na garancijskem listu boste našli seznam pooblaščenih servisnih služb AEG-Electrolux.

U.A.E. Abu Dhabi Universal Trading Company P.O. Box 43 99 Tel.: 6335331 Service Center 6733974	Jordan Jordan Household Supply Co. Ltd. P.O. Box 3/68 Amman/Tel.: 69 70 50	Malta ITC International Trading Company White House Building Mountbatte Street Bata L-Bajda/Tel.: 220644
Egypt Middle East Commercial Center 4 Salah El Dein St. - 2nd floor Heliopolis, Kairo Egypt Tel.: 2024181719	Canada EURO-LINE Appliances 2150 Winston PARK Drive 20 Oakville, Ontario L6H 5V1 Tel.: 905 829 3980 Fax: 905 829 3985	Mauritius Happy World Centre Ltd. P.O. 7 54 1 Chausee Street Port Louis Tel.: 25355

Australia The Andi-Co Group 1 Stamford Road Oakleigh VIC 3166 Tel.: (03) 9569 1255 Fax: (03) 9569 1450 www.andico.com.au	Korea (South) Core InCorp. 3/F Chewoo Bldg. 200 Nonhyun-Dong Kangnam-Ku 135-010 Seoul Telefon 82 2 549 89 61	Namibia AEG NAMIBIA (PTY) LIMITED-Jeppe Street Northern Industrial Area Windhoek Tel.: (061) 21-6082/4 Fax: (061) 217838
Bahrain/Arabian Gulf A.A. Zayani & Sons P.O. Box 9 32 Bahrain Tel.: 17311124	Croatia Electrolux D.O.O. Suplova 7 10000 Zagreb Tel.: 1 61 19512 Fax: 1 61 19513	New Zealand Monaco Corporation Ltd. 10 Rothwell Avenue Albany - Auckland 4399 Auckland 1 New Zealand Tel.: 00 64-92 59 11 11 Fax: 00 64-92 59 11 12
Bulgaria Electrolux Bulgaria E.O.O.D. 91 Levski Blvd. 1000 Sofia Tel.: 2 806676 Fax: 2 980 5276	Kuwait/Arabian Gulf Ali Al-Ghanim Est. P.O. Box 21540 - Safat Tel.: 4822190 Fax: 4820116	Syria WATTAR CO. P.O. Box 36109 Mazzeh - Damascus Direct Phone: 00963116132649 Fax: 00963116119537
Cyprus Hadjikyrlakos & Sons Ltd. Prodromou 121 P.O. Box 21587 Nicosia 1511 Service Telephones: Nicosia 02 481226 Limassol 05 562182 Larnaca 04 633929 Paphos 06 932 699	Lebanon Adib & Assaferi P.O. Box 539 Tripoli	Iran ARIAN International Develop- ment Co. AEG Showroom Sharitati, Balatar as Safar Teheran / Iran Phone No. Showroom: 021 / 285 513 / 4 Phone No. Service: 021 / 312 27 67 / 8
Estonia Electrolux Estonia Ltd. Mustamäe tee 24 EE0006 Tallinn Tel.: (372) 6 650 090 Fax: (372) 6 650 092	Latvia Electrolux Latvija Ltd. Kr.Barona iela 130/2 Riga, LV-1012 Tel.: 371 7313626 Fax: 371 7845954	Poland Electrolux Poland Sp. zo.o. ul. Domaniewska 41 02-034 Warszawa tel.: 022 874 33 33 fax: 022 874 33 00
Hong Kong Dah Chong Hong Ltd. 20 Kai Cheung Road Kowloon Bay Kowloon - Hong Kong Tel.: 0085222621620 Fax: 0085227550333	Lithuania Electrolux Lithuania Verkui 29 2600 Vilnius Tel.: 372 272 3326 Fax: 372 272 3366	Russia Electrolux Russia Ltd. 16 Olympiysky prospekt 129090 Moscow Tel.: (095) 937 7837 Fax: (095) 926 5513
Israel Evis Ltd. Tadiran-Ampa Service 10 Gibonay Israel Street New Industrial Zone Netanya, 42504 Israel	Malaysia Arzbergh Engineering No. 49A/B, Jalan Petaling Utama 7 4600 Petaling Jaya Tel.: 3 795 1084 Fax: 3 795 1082	Saudi Arabia Awad Badi Nahas Est Shara Siteen Jeddah 21463 Phone: 6646583 Alia Trading Co Mecca Road Riyadh 11491 Phone 4645977

Japan Electrolux Japan Ltd. Domestic Appliances Department Maruzen Showa Warehouse Building Tookai 4-5-12, Ota-ku 143-006 Tokyo Tel.: 0120-13-7117 Fax: 03-3790-5257	Singapore Group Pte Ltd. 833 Bukit Timah Road Unit no. 01-11 Royalville 279887 Singapore Tel.: 0065 64638484 Fax: 0065 64638488	Slovenia Electrolux Slovenia D.O.O. Traska Ul. 132 1000 Ljubljana Tel.: 61 1234 137 Fax: 61 1234 238
Thailand Olympia Thai Tower, 444 Rachadapiser Road Samsennok- Huaykwang 10320 Bangkok Thailand Tel.: 006625136111 Fax: 006625136334	Slovakia Rep. Electrolux Slovakia S.R.O. Seberiniho 1 821 03 Bratislava Tel.: 02 4333 4322, 4355 Fax: 02 4333 6976	South Africa AEG (Pty) Ltd. 55, 12th Road P.O. Box 1 02 64 Kew/Johannesburg 2000 Tel.: 8069111
Hungary Electrolux Lehel KFT Erzsébet Királyné útja 87. 1142 Budapest Tel.: 00361/467-3200	Czech Rep. ELECTROLUX DOMÁCI SPOTŘEBIČE CZ DIVIZE ELECTROLUX S.R.O. Customer Centre Hanusova ul. 140 21 Praha 4 Tel.: 2 6112 6112 Telefax: 2 6112 3504	


Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

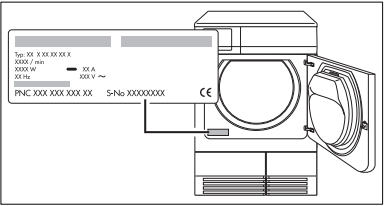

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:

PNC:

S No:

 **From the Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg-electrolux.de>

© Copyright by AEG

822 944 842-01-120406-02

Subject to change without notice